


# Hot Pepper VLE5 (A80C)

## Quick Start Guide FCC ID:2APD4-A80C




Hot Pepper America is on Facebook, Google+ and Twitter

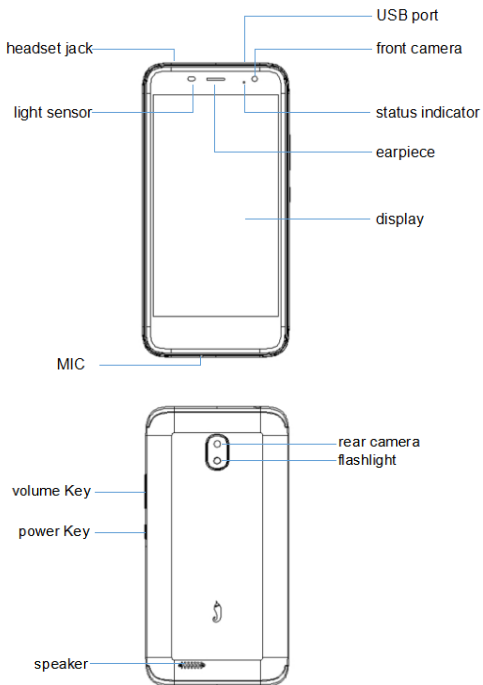

Copyright © 2018 Hot Pepper CORPORATION.

## Insert SIM card & memory card



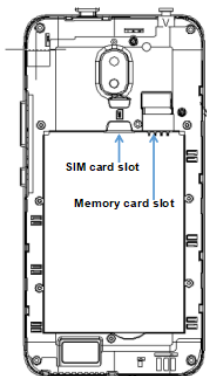



1. Remove the back cover of your phone.
2. Take out the battery.
3. Insert the nanoSIM card into the SIM card slot as shown.
4. Insert the memory card into the card slot as shown (if you need).
5. Reload the battery.
6. Reattach back cover of the phone.



### Important Notes:

The nanoSIM card is a small SIM card. Do not use a micro-SIM or SIM card adaptor which may damage your device.

## Key Functions

Keys	Function
Power Key	Hold down to power on your phone. Press to switch to sleep mode. Press to wake up. Hold down for Silent mode, Airplane mode or Power off.
Back	Press to go to the previous screen.
	Press to exit applications.
Home	Press to return to the Home Screen from any screen. Hold down to access Google Now.
	
Options	Get options on the current screen.
	Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down, Vibrate and Silent mode, Media and Earpiece Volumes.
	Phone icon – Open the dialler for Calls
	Contacts – Access your phonebook contacts
	Messages – Messages app, for SMS and MMS

## Switch your device On or Off

- Press and hold the **Power Key** to turn on your phone.
- If your screen is locked, slide up the padlock icon to unlock the device.
- To turn it off, press and hold the **Power Key** to open the options menu, then touch **Power off**.


## Charge your Battery

Insert the charger lead carefully.

Ensure the plug is inserted with the correct orientation.

Do not force the connector into the charger jack.

Disconnect the charger when fully charged.

When the phone is on the charging, icon  is shown on the status bar.

## How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. During charging the battery percentage is shown on the lock screen.

**TIP:** You can also show the battery percentage on the top bar. Go to Settings > Battery and turn on the battery percentage bar.

## Volume Control

From the Home screen, the volume keys control the Ring volume, Vibrate and Silent. From within a game or media app the volume keys control the media volume. If you are on a Call the volume keys control the incoming call (earpiece) volume.

## Setting Up for the First Time

When you first power on your phone or after a factory reset you need to enter some settings before use.

1. Touch **Start** and step through the wizard selecting your personal preferences. Note that selecting Backup and Restore options will consume data.
2. Further assistance is given in the form of pop ups describing how to use various features. Press OK to clear these notices.

## Connect to a Wi-Fi Network

Use a local Wi-Fi network to download data instead of using your network data.

Go to Settings > Network & Internet > Wi-Fi, touch it and switch on, and then touch a network to join.

If the network is secured you need to know the password. Wi-Fi passwords are case sensitive so enter exactly as it is written.

## The Home Screen



phone messages browser camera

## Settings

Touch the Settings icon on the home screen




















## Screen Locks

You can secure your handset with a variety of different screen locks. Go to Settings > Security & location > Screen lock to set Swipe, Pattern, PIN or Password to lock your frontscreen.

## Change your Ringtone and other Audio Settings

Press Settings > Sound > Advanced > Phone Ringtone, set notification sound, Vibrate mode etc.






















## Phone Status Icons

G	GPRS network		No Signal
E	EDGE network		Signal strength (no data)
3G	3G network		Signal strength (data ready)
4G	4G network		Mobile data in use
	Flight mode		Ringer off
	Emergency calls only		Microphone off (muted)
	Battery flat		Vibrate on
	Battery low		Speaker on
	Battery partially drained		Connected to Wi-Fi network
	Battery full		Wi-Fi data in use
	Battery charging		Headset connected
	Bluetooth on		





## Access the Quick Settings Panel

Swipe down from the top of the screen and touch the Quick Setting icon. Tap to enable or disable the features.






## Notification Icons

	New SMS		microSD card not mounted
	New MMS		microSD card removed
	New Email		Upcoming event
	New Gmail message		Call on hold
	New Hangouts message		New Wi-Fi network detected
	SMS or MMS issue		Downloading data
	Missed call		Uploading data
	Call in progress		USB tethering is on
	USB connected		Wi-Fi hotspot is on
	Song is playing		Bluetooth is on
	Updates available		

## Making Calls


1. Touch Home Key >  > Touch  to open the Dial pad.
2. Enter the phone number using the dial pad. Touch  to delete wrong digits.
3. Press and hold the 0 key to enter the plus (+) symbol for international dialing.
4. Touch the Phone icon  below the keypad to dial.


## Options during a call

- Press  to open the numberpad
- Press  to use loudspeaker (Hands-free) mode
- Press  to mute the microphone
- Press  to put the current call on hold
- Press  to End the call

## When you receive a phone call

The display shows the caller ID and any additional information about the caller saved in Contacts.

Press  ANSWER to answer the call.


Press  DISMISS to reject the call.

**TIP:** You can silence the incoming ring by pressing either of the Volume keys.



## Messaging

Use **Messaging** to exchange text messages (SMS) and multimedia messages (MMS).


### Open the Messaging Screen

Touch  in the Home Screen or from Apps

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.


1. Touch  to write a new message.
2. Touch  to search within messages
3. Touch an existing message to open the thread.

### Send a Text Message

On the **Messaging** screen, touch  to create a new message.





Enter the recipient's number or, if the recipient is stored in Contacts the first letters of their name. As matching contacts appear, you can touch a suggested recipient.

Touch the **Type text message** field, and enter your message using the keypad. Touch  to Send.

## Reply to a Message


Messages you receive are appended to existing threads of the same number. A new thread is created for new numbers.

1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch  to Send.

## Send a Multimedia Message

On the **Messaging** screen, touch  at the bottom to create a new message.

Enter the recipient and the text of the message, as you do when sending a text message.


Touch the  icon to add an attachment

Touch  to Send.



**TIPS:** The default MMS size is **1024KB**, send large files by email instead or share using Social Media.

## Forward a Message


In **Messaging** touch the thread to open the SMS.

1. Touch and hold the message.
2. Touch **Forward** in the menu that opens.
3. Enter a recipient for the message and edit the content
4. if you want.
5. Touch  to Send.


## Delete messages:

1. On the **Messaging** screen, touch a thread.
2. Touch  > **Select item(s)**.
3. Touch the messages you want to delete.
4. Touch  at the bottom.
5. Touch **Delete**.

## Delete message threads:

1. On the **Messaging** screen, touch and hold the thread to delete.
2. If there are some more threads you want to delete, touch them one by one.
3. Touch  at the bottom.
4. Touch **Delete**.

## Message Settings

Touch  > **Settings** in the **Messaging** screen to change **Messaging** settings.

## Transfer files to a Computer

Connecting to a computer enables you to transfer music, pictures and other files to and from your handset. There are various ways to do this.

1. Connect using a USB lead. First time select 'Built in CDROM' to install the handset drivers. Subsequently select MTP on the handset to browse the handset folders on your PC.
2. Use Google Drive to share files in the cloud
3. Connect via Bluetooth to share files with other devices.

**MAC users** need to download the File Transfer app from Android onto your MAC device.

## More Help

Get online support at [vve.712.myftpupload.com](http://vve.712.myftpupload.com) or connect with us via social media; search **Hot Pepper America** on Facebook or Twitter.

## **FCC Regulations**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **CAUTION:**

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

## **Trademark**

Hot Pepper and the Hot Pepper logos are trademarks of Hot Pepper, Inc..

Google, Android, Google Play and other marks are trademarks of Google LLC.